



## Electrical installation Remote control for Jet Thruster Combi:

### Option A: Connection to Joystick unit

#### Cable A:

Cable 1                      Primary side joystick (+12V)

Cable 2                      Ground

#### Cable B:                      Screw at Terminal:

Yellow/green              A              to 1<sup>st</sup> joystick

Cable 1                      B              to 1<sup>st</sup> joystick

Cable 2                      A              to 2<sup>nd</sup> joystick

Cable 3                      B              to 2<sup>nd</sup> joystick

(Interchange **A and B within the A-B pair** to invert the direction of the thrust output)

### Option B: Connection to Pump Unit

Connect to marked screw connectors:

#### Cable A:                      Screw at Terminal:

Cable 1                      +

Cable 2                      G

#### Cable B:

Yellow/green              A              valve one

Cable 1                      B              valve one

Cable 2                      A              valve two

Cable 3                      B              valve two

(interchange **A and B within the A-B pair** to invert the direction of the thrust output)